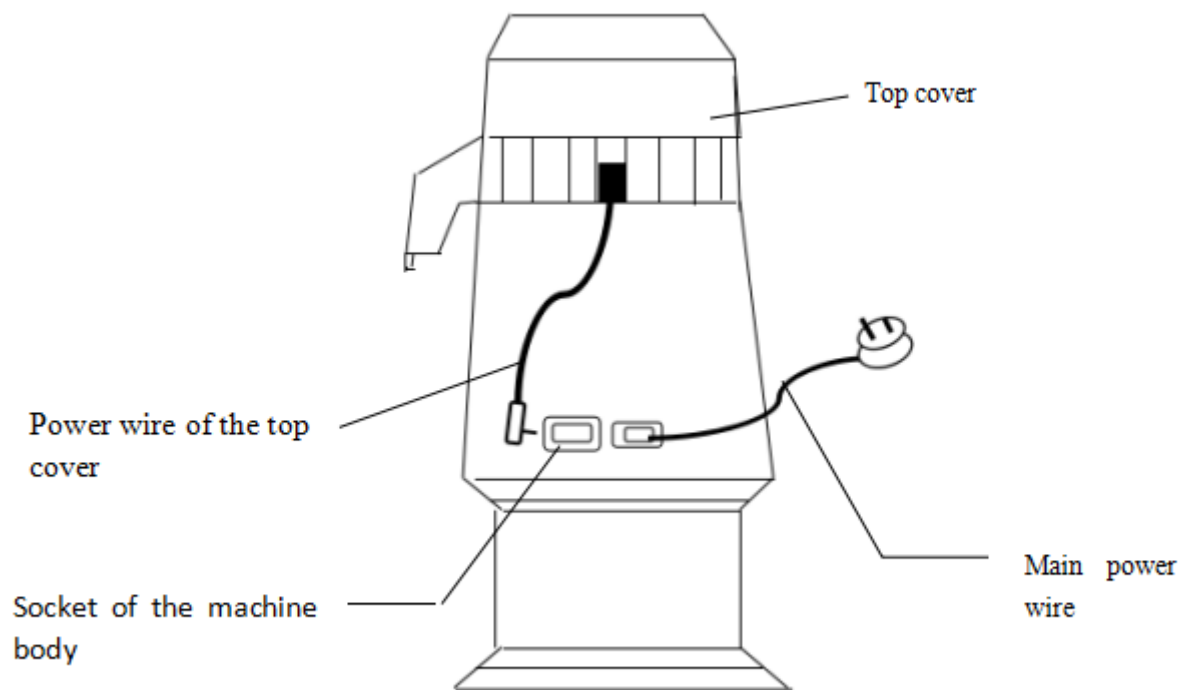
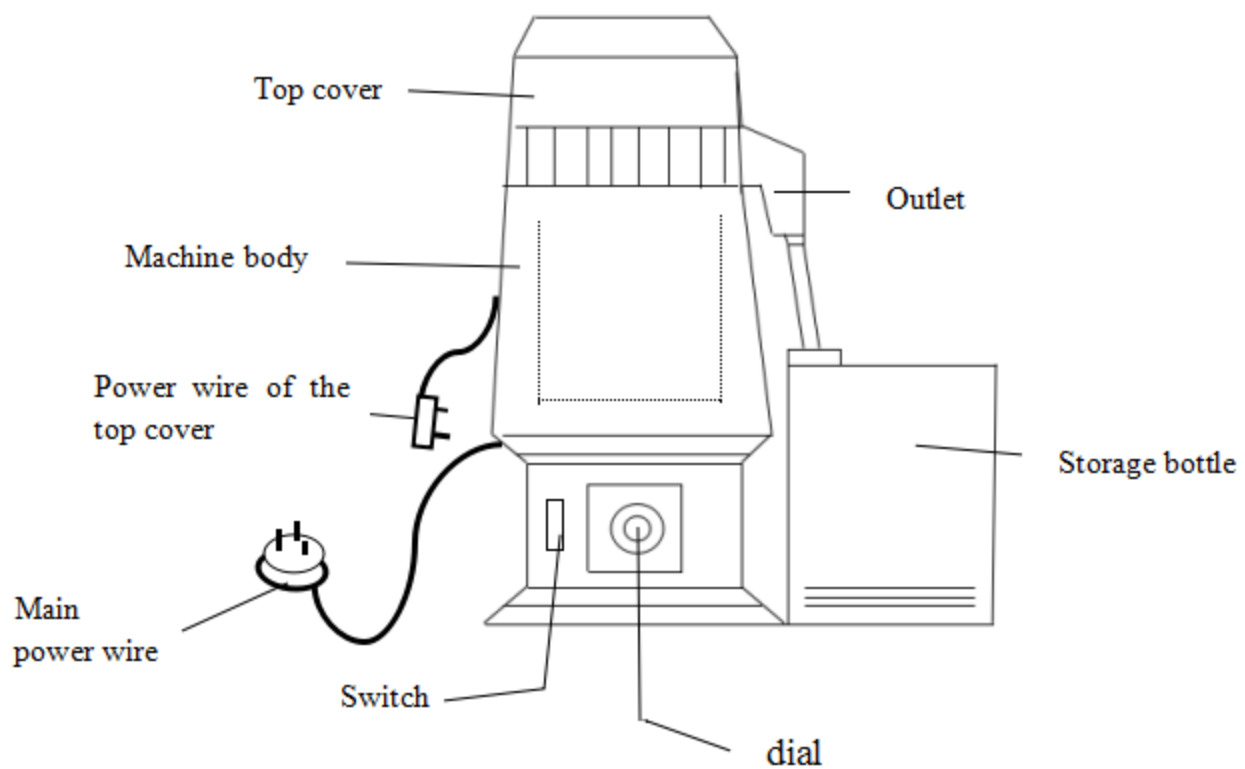

Aeroddix

Still instruction manual. Easy alcohol recovery.

Diagrams



IMPORTANT NOTES

PLEASE READ BEFORE USE AND RETAIN FOR FUTURE REFERENCE

GETTING STARTED:

- Remove the top cover.
- Pour the alcohol solution into the tank.
- Place the top cover onto machine body, while ensuring sure that the silicone seal is tightly secured around the entire rim. This must be airtight.
- Ensure that the machine is on a stable surface.
- Connect the power cord from the top cover to the machine body.
- Place the storage bottle as shown in the diagram.
- Connect the power cord to the power outlet (mains).
- Turn on the switch and turn the dial to 80 - 90 °C. The alcohol in the tank is heated and evaporation takes place. The alcohol will flow through the outlet into the storage bottle.
- The machine will cycle between on and off, indicated by the red and green lights. This ensures that the temperature is kept in the desired range and is part of normal operation.
- Switch off the machine when there is no alcohol left in the tank.

CAUTION:

- Do not set the temperature above 100 °C for more than 10 minutes at a time. This will damage the machine.
- Use the unit in a dry and well-ventilated area.
- Do not remove the cover while the unit is in operation, wait until the unit has cooled down before removing the top.
- Making RSO/FECO and similar: Use an oven-safe dish to hold the herbal extraction (tincture) and add water to the bottom of the tank when recovering alcohol from tinctures. This makes it easier to recover the oil and to clean the machine.